

ELMENDORF AERO CLUB
STANDARDIZED
FLIGHT MANEUVERS GUIDE
(C-185F)

NOVEMBER 2019

TABLE OF CONTENTS

Contents.....	2
Purpose.....	3
Back to Basics.....	4
Slow Flight.....	5
Power-Off Stall.....	6
Power-On Stall.....	7
Steep Turns.....	8
Chandelles	9
Lazy Eights.....	10
Eights-on-Pylons	11
Steep Spiral.....	12
Engine Out 180 Degree Turn	13
Normal / Crosswind Takeoff and Climb.....	13
Normal / Crosswind Approach and Landing.....	16
Soft Field Takeoff and Climb.....	17
Soft Field Approach and Landing	Error! Bookmark
not defined.	
Maximum Performance Takeoff and Climb	20
Maximum Performance Approach and Landing	20
Normal Traffic Pattern	21
Power-Off 180 Degree Accuracy Approach and Landing	22
Balked Landing (Go Around).....	24

Key Figures for C-182 25
PURPOSE

The purpose of this guide is to establish a standard for specific flight maneuvers. Applicable maneuvers from this guide will be used for all Initial/Annual Flight Evaluations, as well as Initial Flight Aptitude Screening for potential flight training applicants.

Standardizing the way maneuvers are performed establishes a solid foundation of basic procedural skills and knowledge. This, coupled with experience gained over time, will enable all Pilots to handle most unusual situations and emergencies in a more predictable fashion with a greater chance of a successful outcome.

Flight instructors and applicants should find these standards helpful in preparation for any flight evaluation. Pilots with less than 200 flight hours are expected to be able to perform these maneuvers at the Private Pilot level. Pilots with 200 flight hours or more are expected to be able to perform these maneuvers at the Commercial Pilot level.

Chandelles, lazy eights, steep spirals, eights-on-pylons, and power-off 180 degree accuracy approach and landings are commercial maneuvers and will only be required for Trooper Pilots with over 200 hours.

This guide does not replace the practical test requirements for pilot certification or flight reviews. The specific airspeeds, power settings, and flap settings used in this guide are for the C-185F, 300 hp only. Stalls, slow flight, chandelles, lazy 8's, steep turns, and unusual attitudes shall be performed at an altitude which allows for recovery no lower than 1500 feet AGL. Steep spirals and emergency procedures will be terminated at 500 feet AGL unless the aircraft is in a position to land.

BACK TO BASICS

1. Every maneuver begins and ends the same way: **SLUF** (Strait and Level Unaccelerated Flight – i.e.; cruise power, trimmed, on altitude and heading, and stabilized). That way, you know exactly when you are beginning the maneuver, and exactly when you are done.
2. The recovery altitude is the altitude you are at when you are finished with the maneuver (i.e.; SLUF). It will probably be different than the altitude from which you started the maneuver. That being said, your instructor may want you to return to your original altitude after recovering from a power off stall.
3. There is no requirement to establish a positive rate of climb when recovering from a stall in a fixed gear aircraft. (The PTS only requires a positive rate of climb prior to retracting the landing gear.) However, the aircraft should be in a pitch attitude that will result in a positive rate of climb at the end of the maneuver.
4. To consistently raise or lower the flaps “incrementally,” use airspeeds that equate to something useful. Pattern airspeeds work well for extending the flaps and V-speeds work well for retracting them during a stall recovery or a go-around.
5. Clearing turns will be accomplished by turning 90 degrees in each direction.
6. The importance of proper trim techniques cannot be over emphasized. Trim constantly changes throughout the flight. Any change in power, pitch, bank, airspeed or weight/CG (fuel burn) requires a corresponding trim change. You should constantly strive to keep the aircraft trimmed “hands off.” A properly trimmed aircraft will allow you to do other things with your eyes and hands (e.g. surveillance, taking notes, inserting coordinates in the GPS) without having to constantly monitor altitude, airspeed and heading.
7. The following maneuver descriptions are designed to produce standardized performance by each Pilot. Therefore, they should be considered procedural in nature. By performing each maneuver as described, you will consistently fly the aircraft (and think through the maneuver) the same way every time. This will develop a sound knowledge and flying skills base and allow you to handle any emergency or unusual flight situation in a predictable fashion based on a solid foundation of the basics.

SLOW FLIGHT

1. Clear the area using clearing turns.
2. Fuel Selector: BOTH - Mixture: FULL RICH
3. Establish and announce altitude and heading.
4. Power, approximately 15" MP; Prop - Full
5. Airspeed in flap operating range, extend flaps in 10-degree increments to desired setting. (90 KIAS – flaps 10; 80 KIAS – flaps 20; 70 KIAS – flaps 40)
6. As airspeed diminishes, adjust power and pitch attitude to maintain level flight.
7. Establish and maintain an airspeed at which any further increase in pitch, load factor, and/or reduction in power would result in an immediate stall.
8. Recognize and announce the first aerodynamic indications of an oncoming stall (e.g., stall warning, mushy flight controls, buffeting).
9. Perform coordinated turns, climbs, and descents as directed by the instructor.
10. Recover to cruise flight by simultaneously applying maximum power, flaps 20. Adjust pitch attitude to maintain altitude. Retract flaps to 10 degrees at V_x , and full up at V_y . (The recovery is analogous to a Go-Around procedure.)

POWER-OFF STALL

1. Clear the area using clearing turns.
2. Fuel Selector: BOTH - Mixture: FULL RICH
3. Establish and announce altitude and heading.
4. Power, approximately 15" MP; Prop - Full
5. Airspeed in flap operating range, extend flaps in 10-degree increments to desired setting. (90 KIAS – flaps 10; 80 KIAS – flaps 20; 70 KIAS – flaps 40)
6. When airspeed reaches approach speed of 60 KIAS, reduce power to idle. Establish a glide and trim at that speed while continuing to maintain heading unless instructor directs a turn.
7. After establishing a stabilized descent, call out the altitude you have picked for the “simulated ground” and transition smoothly to a pitch attitude that will hold that altitude.
8. Recognize and announce the first aerodynamic indications of an oncoming stall (e.g., stall warning horn, mushy controls, buffeting).
9. Recognize and announce the stall, then promptly recover by simultaneously:
 - A. Decreasing angle of attack (relaxing backpressure)
 - B. Maintaining wings level using primarily rudder inputs.
 - C. Applying full power, flaps 20.
10. Adjust pitch to maintain altitude.
11. Retract flaps to 10 degrees at V_x , and full up at V_y . Return to initial altitude at V_y . Return to cruise flight by setting cruise power, and trimming the aircraft to maintain altitude and heading.

POWER-ON STALL

1. Clear the area using clearing turns.
2. Fuel Selector: BOTH - Mixture: FULL RICH
3. Establish and announce altitude and heading.
4. Power, approximately 15" MP; Prop - Full
5. Slow to lift-off speed (60 – 65 KIAS), then simultaneously apply 60% power (18" MP minimum), and establish a takeoff attitude.
6. Establish desired bank angle (as directed by instructor). If a turn is used, 20-degree max bank angle.
7. Transition smoothly from the takeoff attitude to the pitch attitude that will induce a stall. (Feet on the horizon or approximately 20 degrees nose high). (Max allowable pitch is 30 degrees).
8. Recognize and announce the first aerodynamic indications of the oncoming stall (e.g., stall warning horn, mushy aileron control, buffeting).
9. Announce the stall (at the buffet); then promptly recover by simultaneously:
 - A. Decreasing angle of attack (relaxing backpressure).
 - B. Maintaining wings level using primarily rudder inputs.
 - C. Applying full power.
10. Maintain present altitude and accelerate to V_y .
11. Return to cruise flight by setting cruise power and maintaining altitude, heading, and airspeed.

STEEP TURNS

1. Clear the area using clearing turns.
2. Establish cruise flight (Power approximately 2400 RPM, 23" MP, Airspeed at or below V_A , Trim for level hands-off flight.)
3. Establish and announce altitude and heading. Determine a visual reference point (if practical).
4. Smoothly roll into a 45 degree banked turn using coordinated ailerons and rudder. (50 degrees for pilots over 200 hours)
5. Maintain a level turn by looking outside and "dragging the nose across the horizon."
6. Vary backpressure to maintain altitude, ailerons to maintain bank angle, rudder to maintain coordinated flight, and power to maintain airspeed.
7. Approaching the visual reference point (within approximately 5-10 degrees of initial heading) transition smoothly back to straight and level flight using coordinated ailerons and rudder. Reduce backpressure to maintain altitude and power to maintain airspeed.
8. Smoothly transition into a step turn in the opposite direction.
9. After completion of the second 360 degree turn, return to cruise flight by setting cruise power and maintaining altitude, heading, and airspeed.

CHANDELLES

1. Clear the area using clearing turns.
2. Establish cruise flight (Power approximately 2400 RPM, 23" MP, Airspeed at or below V_A , Trim for level hands-off flight.)
3. Establish and announce altitude and heading. Determine visual reference points and wind direction.
4. Adjust power to 2500 RPM, 25" MP.
5. Smoothly roll into the wind and establish a 30 degree bank while increasing backpressure to increase pitch to approximately 5-10 degrees nose high.
6. Maintain 30 degrees bank and continue to increase pitch until the 90 degree point (altitude is increasing, airspeed is decreasing).
7. Gradually start rolling out bank at the 90 degree point while maintaining pitch.
8. Complete the rollout to wings level at the 180 degree point. Airspeed should be approximately $1.2 V_s$.
9. Momentarily hold airspeed without stalling.
10. Resume straight and level flight while letting airspeed increase to cruise.
11. Reduce power to cruise setting and maintain altitude, heading, and airspeed.

LAZY EIGHTS

1. Clear the area using clearing turns.
2. Establish cruise flight (Power approximately 2400 RPM, 23" MP, Airspeed at or below V_A , Trim for level hands-off flight.)
3. Establish and announce altitude and heading. Determine visual reference points and wind direction. (Select a reference point abeam the wingtip.)
4. Raise the nose above the horizon and begin a climb (approximately 5-10 degrees nose high).
5. Slowly roll in bank and enter a coordinated climbing turn.
6. Pass the 45 degree point with maximum nose-up for the maneuver. (Bank is increasing through 15 degrees; speed is decreasing; pitch begins decreasing; bank angle continues to increase).
7. Arrive at the 90 degree reference point with a maximum bank angle of 30 degrees. (Pitch is momentarily level, then descending through the horizon; bank begins to decrease; speed begins to increase).
8. Take note of the altitude and airspeed at the 90 degree point.
9. Pass the 135 degree point with the lowest pitch attitude for the maneuver. (Bank is reducing through 15 degrees; speed continues to increase; pitch begins increasing; bank angle continues to decrease).
10. At the 180 degree point the aircraft is momentarily level at the same altitude and airspeed as at entry.
11. Smoothly roll bank in the opposite direction and reaccomplish the maneuver.
12. Complete the rollout to wings level at the 180 degree point. Airspeed, altitude, and heading should be the same as at entry.
13. Resume cruise flight after completing the maneuver.

EIGHTS-ON-PYLONS

1. Clear the area using clearing turns.
2. Establish cruise flight at 800 feet AGL. (Power approximately 2400 RPM, 23" MP, Airspeed at or below V_A , Trim for level hands-off flight.)
3. Calculate pivotal altitude (ground speed in knots squared divided by 11.3).
4. Select 2 pylons approximately $\frac{1}{2}$ nm apart, perpendicular to the wind.

NOTE: Fly over one of the 2 pylons, put the wingtip on the other pylon and note the bank angle on the attitude indicator. 20 degrees bank angle means the pylons are approximately $\frac{1}{2}$ nm apart. If the bank angle is more than 20 degrees, the pylons are less than $\frac{1}{2}$ nm apart. If the bank angle is less than 20 degrees, the pylons are more than $\frac{1}{2}$ nm apart.

5. Enter the maneuver by approaching the midpoint between the pylons diagonally, with the wind to your back.
6. Just past the intended pylon, roll into a turn around that pylon (approximately 30 to 40 degrees of bank) and place the wingtip on that pylon.
7. Use ailerons to correct up and down movement and elevator (pivotal altitude) to correct fore and aft movement of the pylon on the wingtip.

NOTE: If the pylon moves forward of the wingtip, apply forward elevator (i.e. descend to increase ground speed). If the pylon moves aft of the wingtip, apply aft elevator pressure (i.e. climb to decrease ground speed). Do not use rudder to maintain wingtip position on the pylon.

8. Crossing the midpoint between the pylons, roll back to wings level.
9. Just past the opposite pylon, roll into a turn around that pylon (approximately 30 to 40 degrees of bank) and place the wingtip on that pylon.
10. Use ailerons to correct up and down movement and elevator to correct fore and aft movement of the pylon on the wingtip.
11. Complete the maneuver by crossing the midpoint between the pylons wings level, at the same altitude and airspeed at which the maneuver was entered.

STEEP SPIRAL

1. Clear the area using clearing turns.
2. Establish cruise flight (Power approximately 2400 RPM, 23" MP, Airspeed at or below V_A , Trim for level hands-off flight), at an altitude that will allow at least 3 descending 360 degree turns.
3. Select an appropriate landing area.
4. While maneuvering to the intended landing area, slow the aircraft to best glide speed and configure for landing (up to full flaps may be used).
5. Maintain altitude and trim for hands-off at best glide speed.
6. Abeam the intended landing area, reduce power to idle (Prop – Full), allow the nose to drop, and retrim for hands-off at best glide speed.
7. Maintain a constant radius turn around the intended landing area by varying bank angle to correct for wind. (Normal 20-30 degrees of bank; Max 60 degrees).
8. After the 3rd 360 degree turn, execute a power off landing or go around, as applicable.

NOTE: Clear the engine at least once during the maneuver.

ENGINE OUT 180 DEGREE TURN *(The Impossible Turn)*

1. Establish a stabilized maximum power climb at V_x . (simulating a short field takeoff).
2. Pick an altitude. At that altitude, select Carb Heat on (if applicable), and reduce power to idle (Simulated engine failure after takeoff).
3. Execute a 180 degree descending turn (either left or right) by simultaneously:
 - a. Releasing back pressure to fly the nose below the horizon
 - b. Rolling to approximately 20-30 degrees of bank
 - c. Blending in bottom rudder (left turn = left rudder)
4. When the aircraft is in a position that allows:
 - a. Smoothly increase backpressure to increase turn rate.
 - b. Continue to blend in bottom rudder.
5. At the 180 degree point:
 - a. Smoothly roll wings level (you will still be in a descent)
 - b. Note altitude lost in the turn (at the 180 degree point)
6. Recover by selecting an altitude and returning to cruise flight.
7. Repeat steps 1-6, two more times, and then use the average of the three as your personal altitude loss to be used to determine whether you turn around or land straight ahead.

NOTE 1: The purpose of this maneuver is to assist the pilot in determining a realistic, personal minimum altitude to either return to the runway or to land straight ahead if an engine failure is encountered, in the climb, shortly after takeoff. It requires significant finesse and situational awareness to be properly executed. The amount of altitude loss generally depends on 2 things: (1) aircraft performance and (2) personal comfort level. This maneuver will only be practiced with a qualified Instructor. Minimum recovery altitude for this maneuver is 2500 feet AGL.

NOTE 2: To turn back to the runway after losing an engine actually requires between 270 and 360 degrees of total turn. The actual ground track will be offset from the centerline in the same direction as the turn and is caused by the turn radius. The offset distance is also affected by wind. Turning into the wind will decrease the total offset distance and turning with the wind will increase the total offset distance.

NOTE 3: Add 400 feet to your average altitude loss to compensate for reaction time and maneuvering back to centerline. 200 feet (of this 400 feet) is estimated from applying the old USAF “6 second” rule, which states: “2 seconds to recognize and admit you have an emergency, 2 seconds to analyze the situation and make a control input, and 2 seconds for the aircraft to fully react to that control input.” The other 200 feet are an estimate of the altitude lost in maneuvering back to centerline. EXAMPLE: Avg 300’ loss plus 400’ equals 700’ AGL as your personal minimum altitude (Don’t forget to add field elevation to this to get the number you are looking for on the altimeter). Below this altitude, there is no decision: land straight ahead while avoiding obstacles. Above this altitude you have options.....

NORMAL / CROSSWIND TAKEOFF AND CLIMB

1. Accomplish the before takeoff checklist.
2. Align aircraft with runway centerline with ailerons fully deflected into the wind if crosswind is present.
3. Smoothly apply full power and check instruments. Announce, "Engine instruments in the green, Airspeed alive."
4. As the aircraft accelerates, reduce aileron deflection as necessary and maintain runway alignment with rudder.
5. At 30 KIAS, apply forward yoke pressure to raise the tail to the takeoff attitude.

NOTE 1: As the tail comes up, right rudder will be required to compensate for the left turning tendency resulting from Torque and P-factor.

NOTE 2: If a significant crosswind exists, increase the rotation speed by one half the gust factor, not to exceed 10 knots. This holds the aircraft on the ground a little longer so that a smooth and definite liftoff can be made.

6. As the aircraft lifts off, establish a crab into the wind, level the wings, and establish a V_y climb attitude. Climb out at 85 KIAS.
7. Maintain takeoff power, 85 KIAS, and a ground track along the extended runway centerline during climb out.
8. Once clear of the pattern, establish a cruise climb speed of 90-100 KIAS; and climb power at 25" MP, 2550 RPM, 18 GPH.

NORMAL / CROSSWIND APPROACH (3-POINT LANDING)

1. Accomplish the before landing checklist
2. While flying the appropriate traffic pattern, assess the wind by the required wind correction angles and by the surface wind indicators. (Consider the use of reduced flap settings or a wheel landing, depending on the crosswind conditions.)
3. Prior to 500 feet AGL on final approach, stabilize the aircraft with the final flap setting and crab angle. Maintain final approach airspeed of 65 KIAS with approximately 500 feet per minute rate of descent and 13" – 14" MP (Prop - Full).

NOTE: If gusty conditions are present, increase final approach speed by one half the gust factor, not to exceed 10 knots.

4. Prior to touchdown, establish and maintain a drift correction using the wing low – top rudder (side-slip) method: opposite rudder to keep the aircraft's longitudinal axis aligned with the runway centerline, aileron into the wind to control drift.

NOTE: When to transition to the sideslip depends on pilot proficiency. Establishing the sideslip earlier on final (for low time pilots) allows for a more stabilized approach with maximum exposure to the control inputs needed for the touchdown.

5. At approximately 20' AGL, apply slight backpressure to establish a 3-point attitude and reduce throttle smoothly to maintain a descent rate. As the aircraft touches down, smoothly reduce throttle to idle, smoothly apply brakes, and increase aft yoke pressure. As the aircraft decelerates, increase aileron and rudder deflection as required to maintain "zero side drift."
6. Maintain **FULL AFT** yoke throughout the landing roll and continue to increase aileron deflection fully into the wind as the aircraft slows to taxi speed.

NOTE: Once the tail wheel is on the ground and the power is at idle, the yoke should be held FULL AFT to help maintain directional control. As airspeed decreases the rudder becomes ineffective. If full flaps remain extended, the rudder and elevators are blanked out from airflow from the propeller.

NORMAL / CROSSWIND APPROACH (WHEEL LANDING)

1. Accomplish the before landing checklist
2. While flying the appropriate traffic pattern, assess the wind by the required wind correction angles and by the surface wind indicators.
3. Prior to 500 feet AGL on final approach, stabilize the aircraft with the final flap setting and crab angle. Maintain final approach airspeed of 65 KIAS with approximately 400-500 feet per minute rate of descent and 13"-14" MP (Prop – Full).

NOTE: If gusty conditions are present, increase final approach speed by one half the gust factor, not to exceed 10 knots.

4. Prior to the flare, establish and maintain a drift correction using the wing low – top rudder (side-slip) method: opposite rudder to keep the aircraft's longitudinal axis aligned with the runway centerline, aileron into the wind to control drift.

NOTE: When to transition to the sideslip depends on pilot proficiency. Establishing the sideslip earlier on final (for low time pilots) allows for a more stabilized approach with maximum exposure to the control inputs needed for the touchdown.

5. At approximately 20 feet AGL, apply slight aft yoke pressure for 3-4 seconds and release to reduce the descent rate to approximately 200 fpm. As the main wheels touch down, hold forward yoke pressure to prevent the tail wheel from touching and smoothly reduce the throttle. As the aircraft decelerates increase aileron and rudder deflection as required to maintain "zero side drift." When the aircraft is stabilized on the ground, retard the throttle toward idle.
6. Continue to increase forward yoke to keep the tail up until it descends of its own accord. This will result in the yoke being full forward as the tail starts to lower.
7. Once the tail stops flying and has lowered to the ground, apply **FULL AFT** yoke to keep the tail wheel on the ground. Maintain **FULL AFT** yoke throughout the landing roll and continue to increase aileron deflection fully into the wind as the aircraft slows to taxi speed.

NOTE: Once the tail wheel is on the ground and the power is at idle, the yoke should be held FULL AFT to help maintain directional control. As airspeed decreases the rudder becomes ineffective. If full flaps remain extended, the rudder and elevators are blanked out from airflow from the propeller.

SOFTFIELD TAKEOFF AND CLIMB

1. Accomplish the before takeoff checklist.
2. Prior to taxiing onto the takeoff surface, select 20 degrees flaps and apply slight aft elevator pressure.
3. Taxi onto the takeoff surface at a speed consistent with safety. Avoid stopping on a soft surface.
4. Smoothly apply full power and check instruments while reducing the elevator backpressure to slightly aft of neutral to hold the tailwheel on the takeoff surface. Announce "Engine instruments in the green, Airspeed alive".
5. As the aircraft approaches flying airspeed, further reduce back pressure and raise the tailwheel in preparation for takeoff. After takeoff, remain in ground effect (one wingspan length) while the aircraft accelerates.
6. Establish V_x or V_y pitch attitude as appropriate.
7. Maintain takeoff power and a ground track along the extended runway centerline during climb out.
8. Retract flaps when clear of any obstacles (400' AGL minimum) and continue climbing at V_y . Set climb power at 25" MP, 2500 RPM, 18 GPH.

NOTE: If a crosswind exists, apply the appropriate crosswind procedures as described in crosswind takeoff procedures and raise the flaps.

SOFTFIELD APPROACH AND LANDING

1. Accomplish the before landing checklist.
2. Select the desired touchdown point and complete the appropriate traffic pattern. Extend downwind to allow sufficient time on final for establishing the desired descent profile.
3. Stabilize the airplane on final approach at 65 KIAS (1.3 V_{so}). Descent rate should be approximately 500 feet per minute, flaps full down, and power between 13"-14" MP (Prop – Full).
4. When the intended landing area is assured, reduce power toward idle. As you initiate the flare, increase power to break the descent rate of the aircraft just above the landing surface. Maintain pitch with elevator and control and descent rate with power.
5. Hold this power setting all the way through the flare and touchdown. As the main wheels touch, hold pressure to prevent the tail wheel from touching. Once the aircraft is stabilized with the main wheels on the ground, smoothly reduce power as required while maintaining sufficient pressure to hold the tail off the runway as long as possible. Adjust power according to the surface conditions.
6. When the tail wheel settles to runway, maintain sufficient elevator pressure to minimize the weight on the tail wheel.

NOTE: If a crosswind exists, apply the appropriate crosswind procedures as described in crosswind takeoff procedures. Use of 20 degree flaps, or flap retraction after touchdown will allow use of propeller airflow over the empennage to increase rudder and elevator effectiveness.

MAXIMUM PERFORMANCE TAKEOFF AND CLIMB (SHORT FIELD)

1. Accomplish the before takeoff checklist.
2. Taxi into position at the end of the runway so that maximum runway is available for takeoff. Select 20 degrees flaps.
3. Smoothly advance the throttle to full power. Check engine instruments and announce "Engine instruments in the green, Airspeed alive."
4. As the tail begins to fly (35-45 KIAS) establish takeoff attitude. After liftoff, establish and maintain V_x until well clear of real or simulated obstacles (400' AGL minimum).
5. Once all obstacles are cleared, accelerate to 70 KIAS and slowly retract flaps, lower the nose and accelerate to V_y . then continue the climb to cruise altitude. Set climb power at 25" MP, 2500 RPM, 18 GPH.


NOTE: If crosswind exists, apply the appropriate crosswind procedures as described in crosswind takeoff procedures.

MAXIMUM PERFORMANCE APPROACH AND LANDING (SHORT FIELD)

1. Accomplish the before landing checklist.
2. Select the desired touchdown point and complete the appropriate traffic pattern. Extend downwind to allow sufficient time on final for establishing the desired descent profile.
3. Stabilize the airplane on final approach at 65 KIAS. Descent rate should be approximately 500 feet per minute, flaps full down, and power between 13"-14" MP (Prop – Full).
4. Select an appropriate aim point situated approximately 100-200 feet short of the specified touchdown point and adjust power as necessary to avoid over- or undershooting that aim point. Precise airspeed control is essential for judging the descent profile.
5. In the flare, reduce power to idle and land on (or slightly beyond) the specified touchdown point. Touch down at minimum control airspeed with no side drift, minimum float, and with the airplane's longitudinal axis aligned with and over the runway center/landing path.
6. Begin smoothly applying brakes immediately after touchdown. Retract the flaps while holding positive backpressure on the elevator. Continue applying full elevator backpressure and maximum braking (without skidding the tires) until the aircraft has slowed to normal taxi speed.

NOTE: If crosswind exists, apply the appropriate crosswind procedures as described in crosswind takeoff procedures.

NORMAL TRAFFIC PATTERN

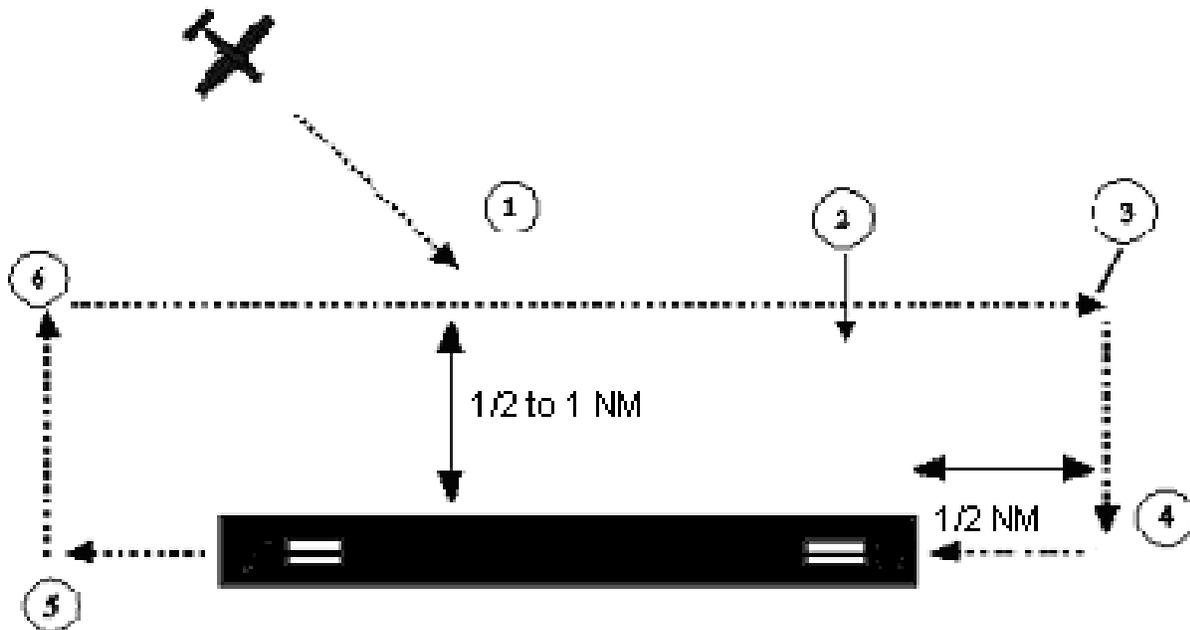

Accomplish the before landing checklist prior to entering the pattern.

1. **Entry:** Enter traffic pattern from a 45 to downwind, at pattern altitude, with approximately 19" MP.
2. **Abeam Touchdown Point:** Pwr to 15" MP, Prop - Full, Flaps 10. Trim for 500 feet per minute rate of descent (Approximately 85 KIAS).
3. **Turn to Base:** 45 degrees to touchdown point (700 feet AGL), Flaps 20 (Flaps, Turn, Talk). Re-check trim for 500 feet per minute rate of descent (Approximately 75 KIAS).
4. **Turn to Final:** 20 degrees to touchdown point (500 feet AGL), Flaps Full (Flaps, Turn, Talk). Roll out on final approximately 1/2 NM from touchdown, 300-400 feet AGL. Adjust pitch and power to maintain a stabilized approach at approximately 65 KIAS, 500 feet per minute rate of descent, 13"-14" MP, re-check Prop - Full.
5. **Turn to Crosswind:** Maintain climb at V_y with max continuous power until within 300 feet below pattern altitude.
6. **Turn to Downwind:** level off at pattern altitude, reduce power to approximately 19" MP.

POWER-OFF 180 DEGREE ACCURACY APPROACH AND LANDING


1. Position the aircraft on a normal downwind and complete the before landing checklist.
2. Determine projected ground track for a continuous turn to final (based on wind).
3. Determine desired reference altitudes around the turn to final (based on field elevation).

NOTE: As a general rule of thumb, divide the final turn into thirds. If the pattern altitude is 1000 feet AGL, plan on being approximately 700 feet AGL at the first 3rd of the turn, 500 feet AGL at the second 3rd of the turn, and rolling out on final at approximately 300 feet AGL and ¼ nm from the intended touchdown point. If you are above these projected altitudes, add more flaps or extend the ground track. If you are below these projected altitudes, shorten the ground track.

4. Close the throttle abeam the intended touchdown point (Prop – Full).
5. Establish glide speed based on wind and projected ground track.
6. Evaluate aircraft performance based on determined ground track and reference altitudes.
7. Lower flaps as desired. (Consider delaying the last 20 degrees of flaps until landing is assured).
8. Touchdown at or within 200 feet beyond the intended touchdown point, on centerline, with the aircraft aligned parallel to the runway.

Forced Landing Pattern

(Typical - No Wind, Windmilling Prop)

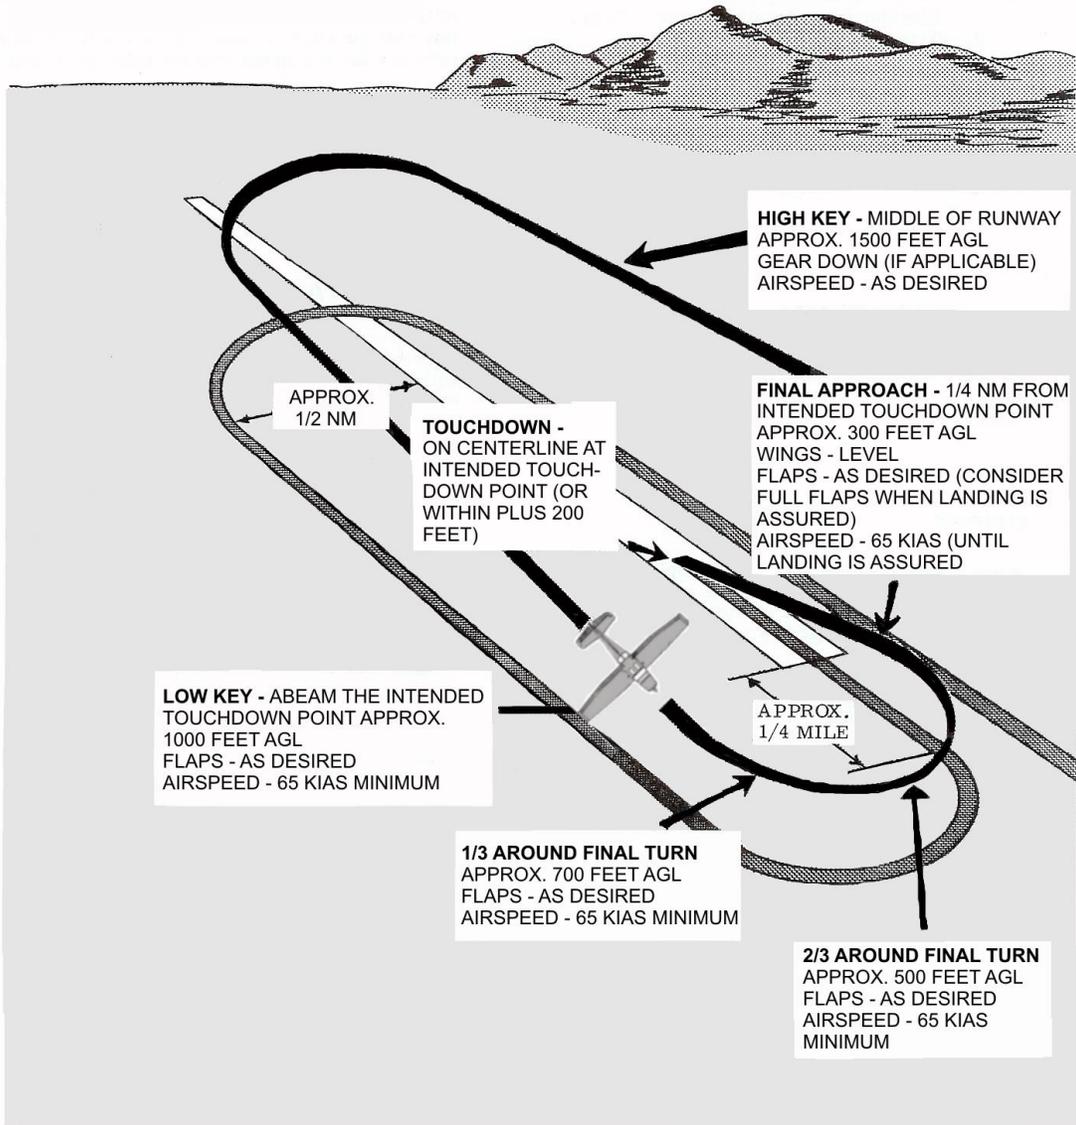

BALKED LANDING (GO-AROUND)

1. Smoothly apply full power and retract the flaps to 20 degrees. Establish a pitch attitude equivalent to V_y .

(Warning: Jamming the throttle forward can cause the engine to falter or quit.)

2. If obstacles are present, establish a V_x pitch attitude and maintain V_x until clear of obstacles (400' AGL minimum).
3. As the aircraft accelerates, retract flaps to 10 degrees at V_x and flaps up at V_y . Continue climb to pattern altitude.
4. Side step to the right to keep conflicting runway traffic in sight.
5. Announce the go-around on CTAF or to the Tower

NOTE: The decision to execute a go around is no reason for embarrassment, but rather the manifestation of sound judgment. Welcome any opportunity to practice this vital maneuver!

KEY FIGURES FOR C-185F

GENERAL:

MAX GROSS WEIGHT	- 3350
ENGINE	- 6 CYL; 300 HP; CONTINENTAL
PROPELLER	- CONSTANT SPEED (10.6 – 25.6 DEGREES); 80" DIAMETER; Mc CAULEY
FUEL	- 88 GAL MAX; 84 GAL USABLE; 100LL (BLUE) 110/130 (GREEN)
OIL	- 12 QT MAX; 9 QT MIN; SAE 20W50
WING SPAN	- 36'
MIN TURN RADIUS	- 21' 10"

ENGINE:

MAX RPM	- 2850 (5 MIN)/2700
NORMAL RANGE	- 2200 - 2550
WARM-UP	- 1200 – 1400
MANIFOLD PRESSURE	- 15 – 25"
MAX CYL HEAD TEMP	- 460F
NORMAL RANGE	- 200F – 460F
MIN FUEL PRESS	- 3.5 PSI
MAX FUEL PRESS	- 19.5 PSI (25.2 GPH)
NORMAL PWR F/F	- 7 – 17 GPH

OIL:

MAX TEMP	- 240F
NORMAL RANGE	- 100-240F
MIN PRESSURE	- 10 PSI
MAX PRESSURE	- 100 PSI
NORMAL POWER	- 30 - 60 PSI

ACCELERATION:

FLAPS UP	- +3.8 TO -1.52G
FLAPS DOWN	- +2.0

MAG CHECK (1700 RPM):

MAX DROP - 150 RPM (FOR EITHER MAG)
COMPARISON - +/- 50 RPM (BETWEEN MAGS)

VACUUM CHECK (1700 RPM):

ALLOWABLE RANGE - 4.5 TO 5.4 PSI

ELECTRICAL SYSTEM:

ALTERNATOR - 60 AMP
BATTERY - 24V
OVER VOLTAGE LIMIT - 31.5 VOLTS

ELECTRICAL INSTRUMENTS:

FUEL QUANTITY INDICATORS
OIL TEMP
HORIZONTAL SITUATION INDICATOR (HSI)
COURSE DIRECTION INDICATOR (CDI)
RADIO MAGNETIC INDICATOR (RMI)
TURN COORDINATOR
AMMETER

ENGINE DRIVEN INSTRUMENTS

ENGINE TACHOMETER (RPM)
OIL PRESSURE
MANIFOLD PRESSURE
FUEL FLOW

VACUUM DRIVEN INSTRUMENTS:

ATTITUDE INDICATOR
SUCTION GAGE

PITOT STATIC DRIVEN INSTRUMENTS:

AIRSPEED INDICATOR (AI)

VERTICAL SPEED INDICATOR (VSI)

ALTIMETER (ALT)

INSTRUMENT GROUP CATEGORIES:

POWER	- RPM; OIL TEMP; OIL PRESS; MAN PRESS, CYL HEAD TEMP
PERFORMANCE	- AIRSPEED INDICATOR; VSI; TURN COORDINATOR
FLIGHT	- ATTITUDE INDICATOR; ALT; HSI; CDI; RMI
WARNING	- AMMETER; VACUUM GAGE; LOW VOLTAGE LIGHT

KEY SPEEDS:

VA	- 117	BEST GLIDE	- 75
VNE	- 184	FINAL APPROACH	- 60 (<i>FULL FLAPS</i>)
VNO	- 149	MAX CROSS WIND	- 15
VFE	- 110 (<i>TOP OF WHITE ARC</i>)	HYDROPLANE	- 46
VS	- 57	STALL WARNING	- 5-10 <i>KNOTS</i>
VSO	- 48		<i>ABOVE THE STALL</i>
VX	- 76		
VY	- 90		

NORMAL CLIMB

2550 RPM; 25" MP; 90 – 100 KIAS; 18 GPH

CRUISE POWER SETTINGS (4000'; +7C [STD DAY])

2400 RPM (65%); 23" MP; 134 KIAS; 13.7 GPH

NORMAL PATTERN:

PATTERN ENTRY	- 1000 AGL; AIRSPEED/POWER AS REQUIRED
ABEAM TOUCHDOWN	- 15" MP; FLAPS 10; TRIM FOR 500 FPM DESC
TURN TO BASE	- 700 AGL; 45 DEGREE ANGLE-OFF; FLAPS 20; 500 FPM DESC
TURN TO FINAL	- ½ NM FROM TOUCHDOWN; 300-400 AGL; FLAPS 40
DESCENT ON FINAL	- 500 FPM (4.5 DEGREE G/S) @ 65 KIAS (NORMAL/SHORT/ SOFT); 75 KIAS (NO-FLAP); 12-15" MP; PROP FULL